

1. Assembly:

After vehicle assembly, do the following:

- a. *Ensure all nuts/bolts are securely fastened.*
- b. *Replace engine oil with a high grade blend (15-40w) or (10-40w)*
- c. *Replace sparkplug with an appropriate new NGK plug. Part #CR6-HSA*

25 point ATV/motorcycle system check:

Fuel System

- 1) Check carburetor for proper operation
- 2) Check for proper operation of choke
- 3) Check for proper operation of fuel pet-cock
- 4) Check for proper operation of fuel drain line
- 5) Check for proper operation of gas tank vent
- 6) Check and adjust idle set screw
- 7) Adjust needle if necessary (high altitude)

Electrical

- 8) Install and check battery - fill with electrolyte if battery is not a sealed unit
- 9) Check fuses
- 10) Check all lights
- 11) Check ignition
- 12) Ensure proper operation of starter
- 13) Check that spark plug wire is properly installed

Engine

- 14) Check oil for proper level and quality
- 15) Check cooling system for anti-freeze (only on water cooled units)

Suspension

- 16) Check wheel bearings
- 17) Check and adjust suspension components
- 18) Check and adjust tire pressure (2-6psi and within 1lb of each other)
- 19) Check and adjust brakes

Other

- 20) Check all plastic for damage
- 21) Check and adjust throttle cable
- 22) Check foot-rests
- 23) Test all hand and foot controls for proper operation
- 24) Check and adjust (and lubricate) chain
- 25) Check transaxle fluid level (if necessary)

2. First Service Interval – 10-15 Hours Use

- a. Check all nuts/bolts for tightness and security.*
- b. Check all Engine/Vehicle fluid levels and ensure there are no leaks.*
- c. Check and adjust chain tension if necessary (initially there will be “chain stretch”).*
- d. Check tire pressure.*
- e. Check all cables/controls for proper operation.*

3. 3 Month Service Interval:

- a. Check all nuts/bolts for tightness and security.*
- b. Change Engine Oil.*
- c. Check and replace spark plug if necessary.*
- d. Check and adjust chain tension if necessary.*
- e. Check tire pressure/condition.*
- f. Check all cables/controls for proper operation.*
- g. Lube all fittings/chain as necessary.*

4. 6 Month Service Interval:

- a. Check all nuts/bolts for tightness and security.*
- b. Change Engine Oil and Filter.*
- c. Replace Spark Plug.*
- d. Check and adjust chain tension if necessary.*
- e. Check tire pressure/condition.*
- f. Check and adjust Valve Clearances if necessary.*
- g. Check all cables/controls for proper operation.*
- h. Lube all fittings/chain as necessary.*
- i. Check all Vehicle fluid levels (coolant, brake fluid, etc.)*

5. 12 Month Service Interval:

- a. Check all nuts/bolts for tightness and security.*
- b. Change Engine Oil and Filter.*

- c. *Check and replace Spark Plug if necessary.*
- d. *Check and adjust chain tension if necessary.*
- e. *Check tire pressure/condition.*
- f. *Check all cables/controls for proper operation.*
- g. *Lube all fittings/chain as necessary.*
- h. *Flush and replace brake fluid.*
- i. *On water-cooled vehicles – Flush and replace coolant.*

Dealers/Retail End Users: Following these Manufacturer's warranty Service Items/Intervals will help to ensure smooth, efficient and fun operation of your vehicles. All service must be documented by a Tao Tao USA authorized Dealer/Service Provider in order to maintain the original factory warranty. Tao Tao USA/Budget ATV's will do everything in its power to ensure your continued satisfaction with your vehicles.

NOTE: This warranty does not cover neglect, abuse, misuse or negligence or damaged parts from accidents or shipping. All warranted items are covered in the Tao Tao USA/Budget ATV's warranty, and does not include all wearable parts including, but not limited to: brakes, tires, batteries and body parts.